

Immediate color and dimming control of your Miro Cube™ or Braq Cube™ from an easy hand-held interface.

The Miro Preset Remote makes it simple to call up a color or color temperature and then dial in the brightness to just the level needed. Perfect for party planners who need to match a color theme, photographers and film-makers looking to set a color temperature or anytime it's inconvenient to access the back panel interface of the Cube or set up a full lighting console.


The Preset Remote is intended to control a single fixture, or a DMX daisy chain of slaved fixtures, all controlled identically. Each Miro/Braq unit must be set in DMX Mode, Address 001.

The Preset Remote offers three operation Modes depending on which Cube you are using and what quality of light you want to dial in.

Mode 1 – Kelvin (WNC), only for use with Miro/Braq WNC, sets white light CCT for a Miro/Braq WNC unit. Choose from 10 preset color temperatures and then smoothly dim from 0 to 100 by adjusting the knob. A quick center press will toggle the unit to blackout and back.

Mode 2 – Kelvin (4C), only for use with Miro/Braq 4C, sets white light CCT for a Miro/Braq 4C unit. Using the full palette available from the RGBW quad chip in the 4C units, select from among 10 predetermined color temperatures to achieve a flattering, white light. Full dimming and on/off available using the adjustment knob.

Mode 3 – Color (4C), only for use with the Miro/Braq 4C, selects from a predetermined palette of 36 saturated and pale colors allowing the user to quickly choose and set color output for the 4C. Full dimming and on/off available using the adjustment knob.

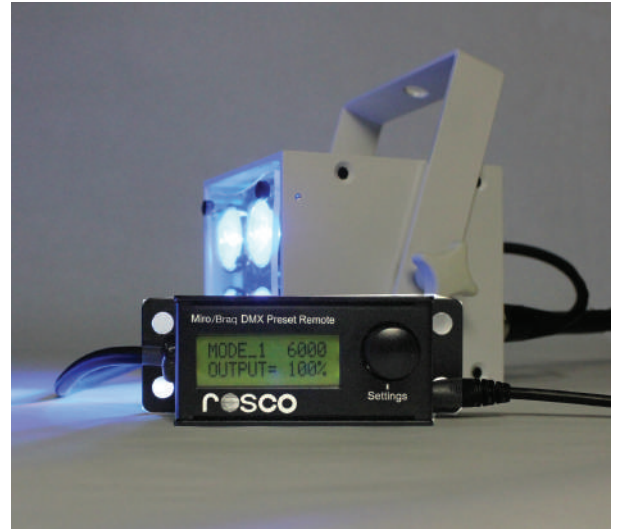

QUICK START

1. Configure the Miro/Braq cube into DMX Mode. Set to DMX Addr 001. Connect 5 pin DMX cable from Preset Remote to DMX Input on Cube.
2. Attach 12vDC power supply to Preset Remote and plug into mains power.
3. Press and Hold knob to enter Set-Up Mode.
4. Rotate knob to select Operation Mode desired. Press once to confirm selection.
5. Rotate knob to select secondary options: Kelvin CCT Preset or Color Selection. Press once to confirm selection. This exits set up mode.
6. Rotate knob to dim from 0 to 100%.
7. Press knob once to immediately black-out fixture(s). Press again to exit BO mode.
8. To change parameters, repeat process. It is not possible to adjust CCT or Color selection without reselecting Operating Mode.

Note: Miro/Braq Cubes are designed to hold their last state in the event of a loss of DMX signal. It is therefore possible to use the Preset Remote to configure a Miro/Braq cube and then disconnect the DMX cable. The unit will hold its setting and the Preset Remote can be used to configure another fixture. However, if power is lost to the fixture, the DMX state will be lost when the fixture is powered back on.

SPECIFICATIONS

Part No.	515 91015 0000 Preset Remote – Miro/Braq Cube
Power	12v DC input. 2.1 Barrel connector
Output	DMX512 3 or 4 channels. Device set to Addr 1
Control	Mode 1 – Kelvin (WNC) Mode 2 – Kelvin (4C) Mode 3 – Color (4C)
Approvals	CE